

FP Sensor Reset Flow

Set	FP Sensor Reset (Sensor Reset)	0x40	0x11
Set	Fuse_load	0x40	0x14



Re-Calibration Flow

Set (Get)	Run Calibration	0x40	0x23
Get	Get CalibrationMean	0x40	0x24

Re-Calibration Condition

1. Current Image (x,y) – Background Image (x,y) < 250
2. If have more than 16 % pixel (satisfy this "1")

→ Driver can start execute re-calibration process

Mean Compare

Compare

Background Mean (Driver) & Calibration Mean (Bridge)

|different value| > 500

→ Re-Calibration Again

